


DISCOVERREPAINT

DON'T REPLACE IT REPAINT IT NEW

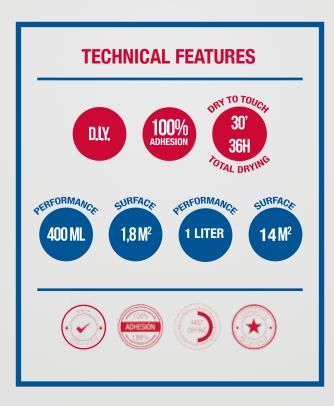









PREPARATION

1 Clean the Surface



Clean the surface with a degreaser (Cleaner Repaint) to remove any rest of wax or polish, as well as all the dirt stuck on the surface. Use a moistened cloth in solvent. Finally, rinse well the degreaser.

2 Prepare the environment



The application normally generates pulverization for which it is advisable to properly prepare the environment and use masking tape to protect any compromised areas.

3 Protect Yourself



Always use safety glasses, mask and protective gloves during application.



Clean and sand



Sand with p220: sand all the surface to make it rough and completely remove the substrate. In new surfaces or those not used much it is better to sand until the protective layer is totally eliminated.

Once the surface has been sanded, clean it with Thinner 00 **Repaint** solvent to get rid of all the dust that appears from the sanding and maintain the surface completely clean to proceed with the application.

2 Spray Application 🤧



Before the application, shake the aerosol well during approximately two minutes. Keep a distance of approximately 20-25cm. For better results apply in thin layers. Repeat the process 3 times. Colors of less coverture like yellow, orange or red, may need more layers to achieve a better finish.

In case two much paint is sprayed and the paint leaks, we recommend to wait until it is completely dry and after repair it by sanding it again and repainting it.

Once the application is finished turn the can upside down and press the nozzle until only air comes out.

3 Drying 🧖



Repaint will be dry to the touch in less than 30 minutes, however the complete process of drying will take up to 36 hours. Between layers wait 10 to 15 minutes.



To achieve a total Professional finish

- · Try to make the first layer as thin as possible in order to create a link for next layers.
- · The distance recommended between the Surface and the spray is 20cm, drawing continuos and thin lines.
- · Do not paint if the environment is too wet.
- · Do not paint if the Surface has been exposed to sunlight for too long or at high tempratures.
- · If the nozzle gets dirty, turn the can upside down and press it until only air comes out.
- · Use outdoors marking tape, it normally has a better grip on pvc surfaces.
- · If the Surface you would like to paint is dark and you will paint with a lighter color you will probably need more layers.
- · Avoid touching the painted surface without gloves, the greese of the fingers can produce imperfections in the final result.
- · If you have spotted any area that should not have been painted, you can remove the paint with Repaint solvent.
- · Make sure that the Surface is made of PVC, neoprene or hypalon. Some polyurethane surfaces can cause confusion.
- · The paint may not work well on this kind of materials.







> after <







> inflatable boats <

> cushions <

DON'T REPLACE IT REPAINT IT NEW



> fenders <

> seats <



Do not ingest



Do not ingest or prepare food in areas of paint storage.

Do not inhale 🔪



The inhalation of paint solvent vapour can be reduced with the proper area ventilation to keep it clear from any hazardous substances. If it is not posible to do it in a well ventilated area, it is recommended to use a suitable machine to create the ventilation artificially.

Avoid contact with eyes



Always use safety glasses during application and when risk of splatter exists. You can find this protective equipment in any DIY store.

Avoid contact with skin 🎾



The skin can suffer irritations if in contact with the paint. Always use protective gloves.

Spray maintenance and storage



- Keep away from children.
- Keep in a cool and dry place.
- Keep away from heat and other ignition sources.
- Do not expose to sun light.



More information on our website www.repaintweb.com

If you have any doubts or questions do not hesitate to contact us

Calle San Francisco, 57. 4° Of. 3 y 4. 36201 - Vigo T: 986291908 M:info@repaintweb.com

